
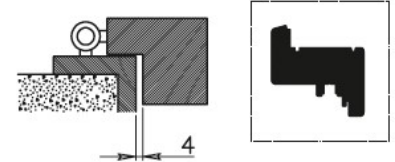
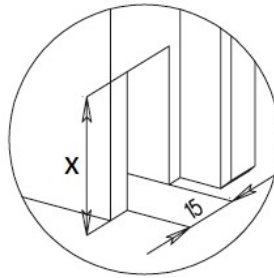





DSD 1528, DSD 1530

Deventer Soundproof

Assembly and adjustment instructions

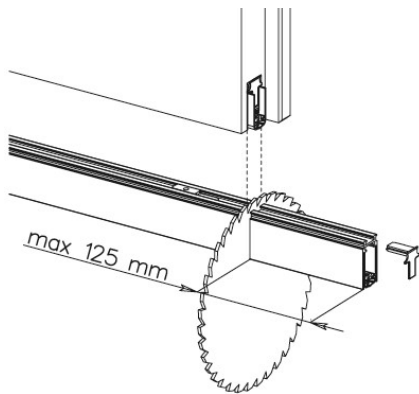

DSD 1528 x = 28 mm
DSD 1530 x = 30 mm

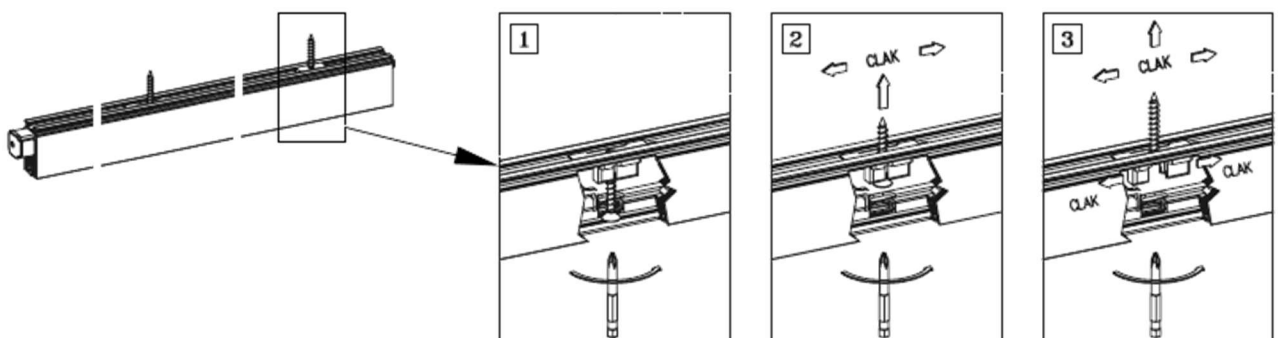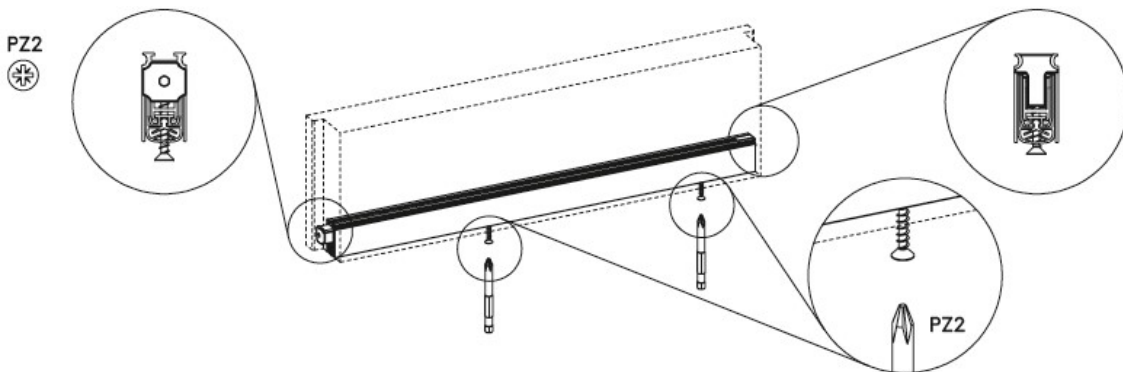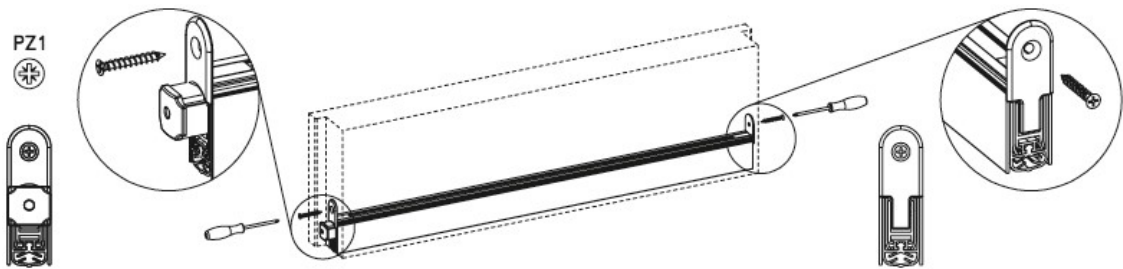

DSD 1528, DSD 1530

Deventer Soundproof

Assembly and adjustment instructions

- 2 -

